



AFT hoisting eye t=20 mm
 To be fully welded on top of transomplate (t=40 mm)
 by full penetration welds
 (angle 29 degr relative to
 vertical, see side view)

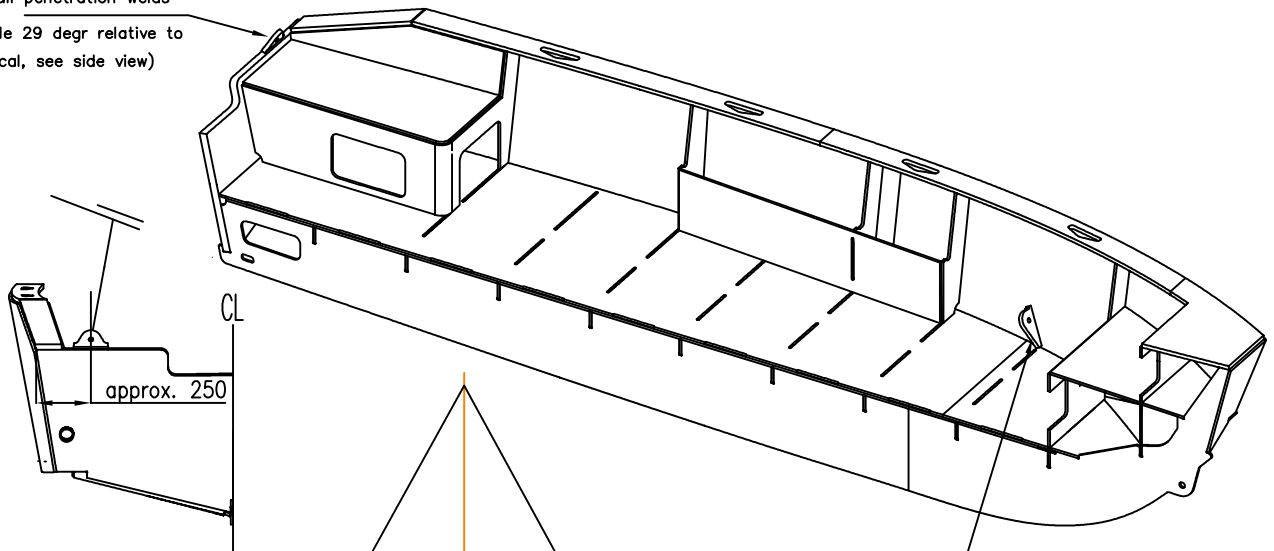

FWD hoisting eye t=20 mm
 bottom edge aligned to part T8
 To be fully welded at both sides
 by full penetration welds
 (inner angle 62 degr relative to
 floor plating, see side view)

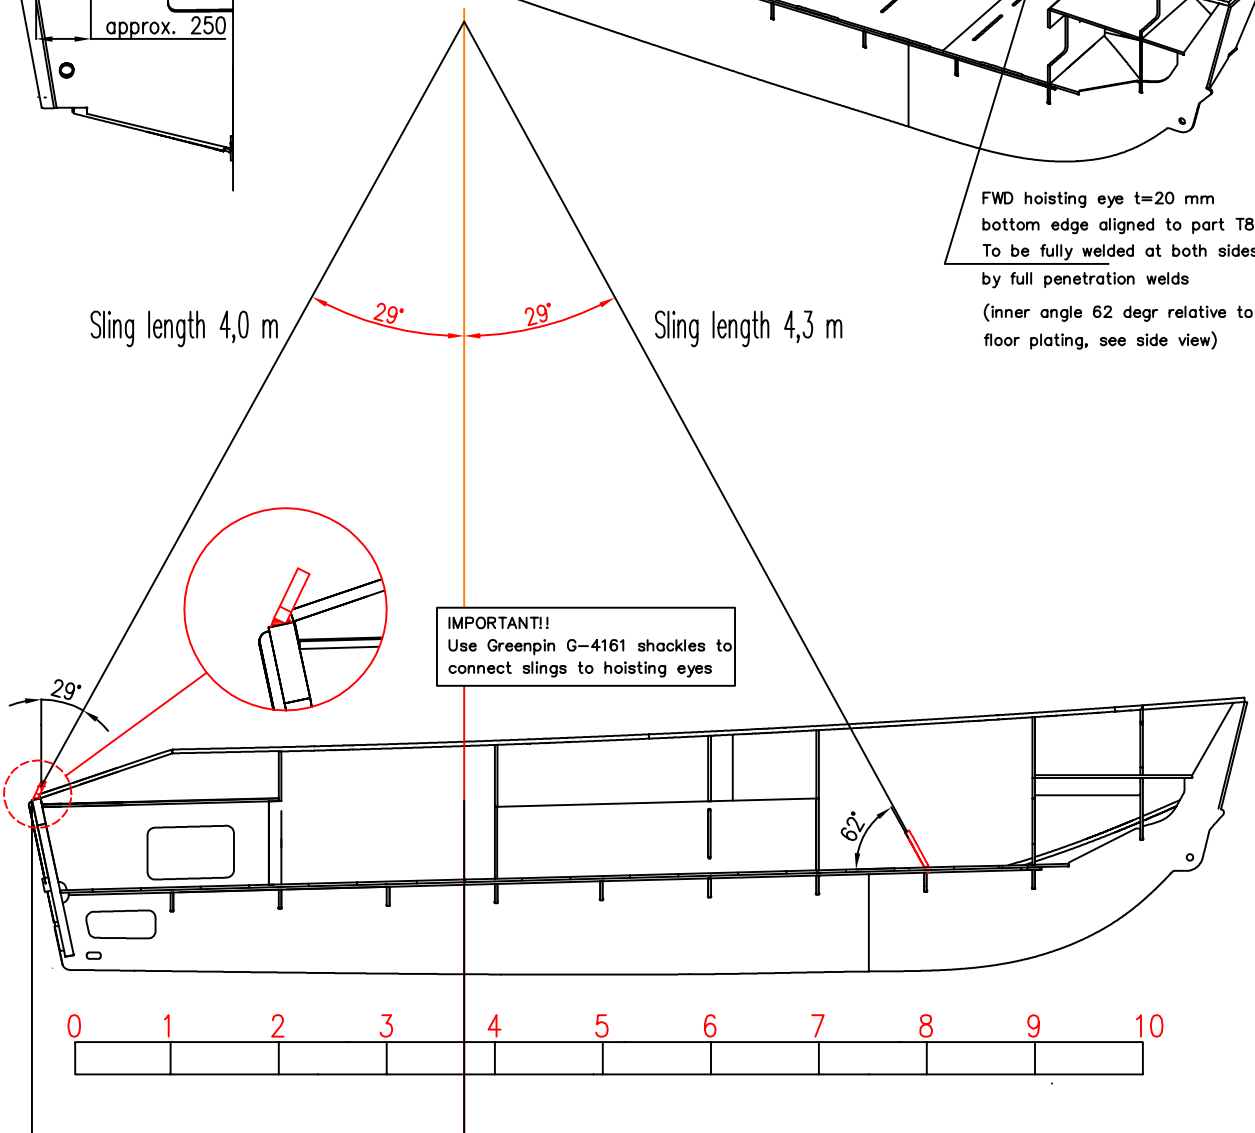

IMPORTANT!!
 Use Greenpin G-4161 shackles to
 connect slings to hoisting eyes

APPROX. COG

DWB DUTCHWORKBOATS		DRAWN DutchWorkboats	FORMAT -	PROJECTION
		CHECKED B.A. de Vries	SCALE -	
		APPROVED	DATE 18-01-2017	
HDPE Support 5.50 – HOISTING ARRANGEMENT				
TYPE	HDPE Support v5 with tiller outboard			
	YARD NO contractor	DWG NO	SHEET	REVISION
	YARD NO building yard			